

HOW TO REMOVE A MESSAGE FORM A DCT OR A DVR.

Hit the menu button on the remote.

Highlight the house on the guide and press the okay button on your remote.

Highlight messages on the guide and press the okay button on your remote. (On a DVR is will be on the next page.)

The message with already be highlighted press the okay button on your remote.

Highlight the X icon on the bottom right hand side of the screen and press the okay button on your remote.

Press the exit button on your remote.

The message is now removed.